Insulated Doors

IMB-V7 Slat









Motor Operated Between Jamb Mounted


Page#: Page 1

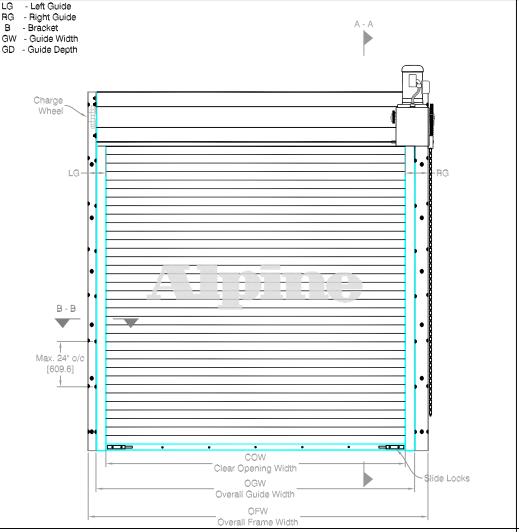

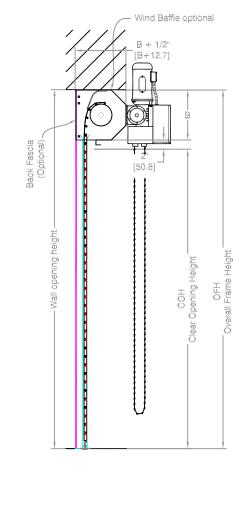

COIL SIDE ELEVATION

VERTICAL SECTION A - A

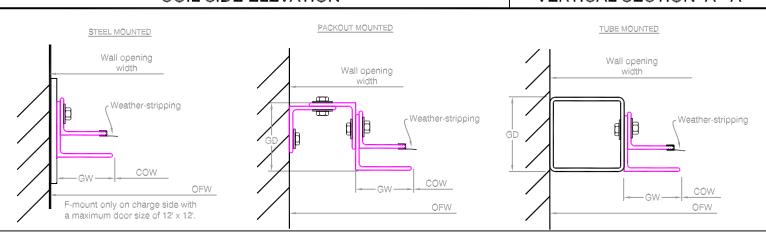

GUIDE SECTION B - B

Notes:

- 1. See page 2 for more options.
- 2. All metric conversions of dimensions are shown in brackets [].

SALES REP:

CUSTOMER:

JOB NAME:

NUMBER:



Insulated Doors IMB-V7 Slat **Motor Operated** Between Jamb Mounted Page#: Page 2 1-1/2" [38.1] 3-1/2" [88.9] 1/2" [12.7] 3/4" [50.8] [19.05] Structural Steel [25.4] Roll-formed, Double Angle Double Angle Aluminum extruded Tubular Bar with electrical sensing edge **BOTTOM BAR DETAIL** Round Shape Hexagon Shape Square Shape Hood Structural Roll-Formed Angles Guide Angles Guide HOOD SHAPES AVAILABLE FOR THIS DOOR **GUIDE OPTIONS** IMB V7 roll formed 13/16" thick IMB slat sections perforated face w/ styrofoam insulation (Indoor use for higher stc rating) 2 3/4 [69.85] 13/16"-



Distributed By:

Call your Alpine representative for additional options and safty products to help find the best. Alpine door to suit your needs.




NOTE: MAXIMUM PIPE DEFLECTION ON ANY SIZE DOOR IS .034

IMB-VTM

Page#: Page 3

Finding the minimum required operation for the size door you need.

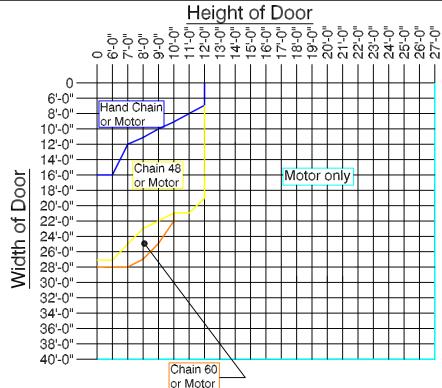

Operator Legend

Manual Push Up OperationHand Chain Operation

Hand Chain w/ Gear reduced 48Hand Chain w/ Gear reduced 60


Motor Operation Only

To use Chart: Find where your door width and height meet to find the minimum operation that may be used for that door size.

For example: The blue line indicates a Hand Chain Operation. Any size door on that line or above that line may use a Hand Chain, including the door sizes that fall into the Manual push up door. But, The Manual push up door may not be used for any door size below the line representing Push up operation. For any door size larger than what is represented here please consult your Alpine Overhead Doors, Inc. Factory. This Graph is for reference only, subject to change without notice.

Finding the minimum required bracket size for the door you need.



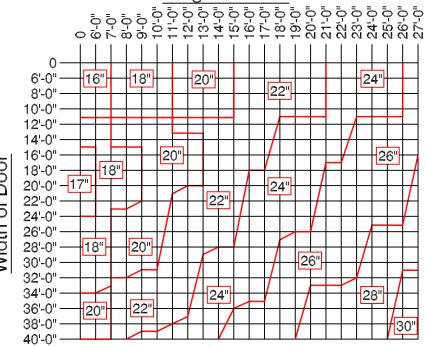

NOTE: Bracket sizes may vary based on gauge of curtain. Bracket size is directly related to the pipe low moment arm deflection (not more than .03 inches per foot).

To use Chart: Find where your door width and height meet to find the minimum bracket size for your door. For any door size larger than what is represented here please consult your Alpine Overhead Doors, Inc. Factory. This Graph is for reference only, subject to change without notice.

Distributed By:

Manufactured by:

OVERHEAD DOORS, INC.

8 HULSE ROAD EAST SETAUKET, N.Y. 11733
TEL: (631)473-9300 FAX: (631)642-0800

© COPYRIGHT DEC 2006