

BOX SPRING DOOR

3" Curved Slat




DAWN³ DOOR[®]
ECONOMY BOX SPRING DOOR


Manual Push-up operated
Between Jamb Mounted

Page#: Page 1


LG - Left Guide
RG - Right Guide
B - Bracket
GW - Guide Width
GD - Guide Depth

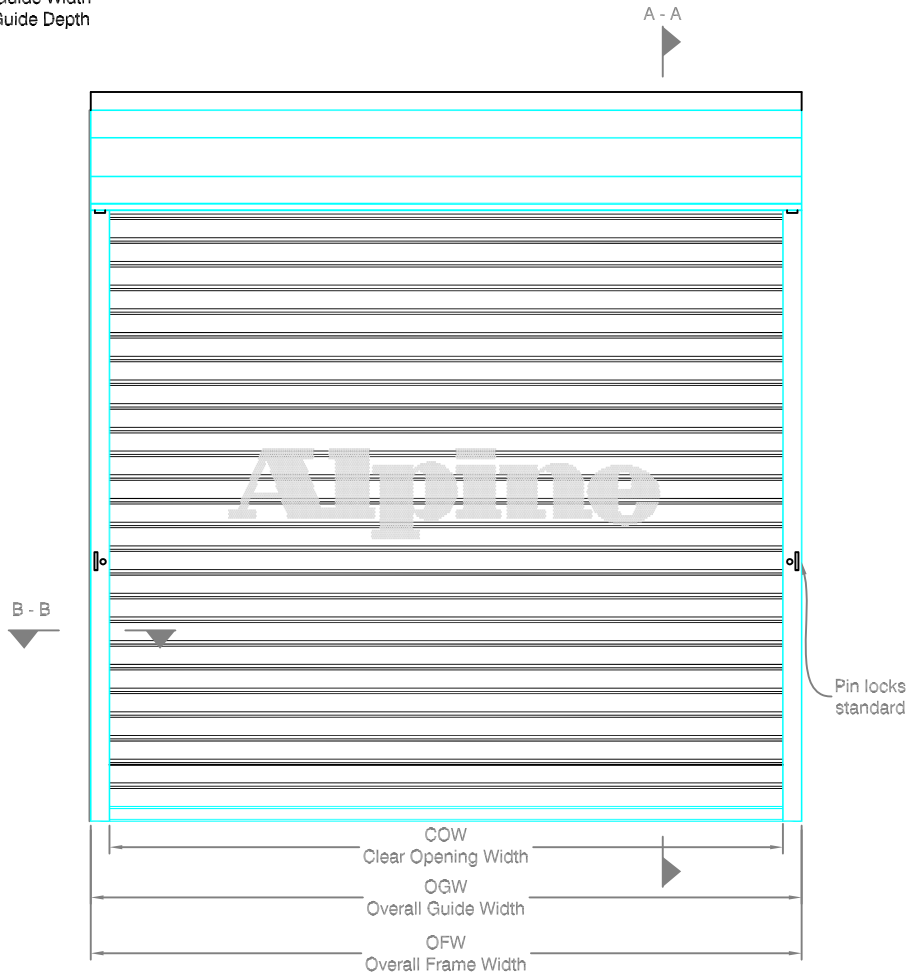


COIL SIDE ELEVATION

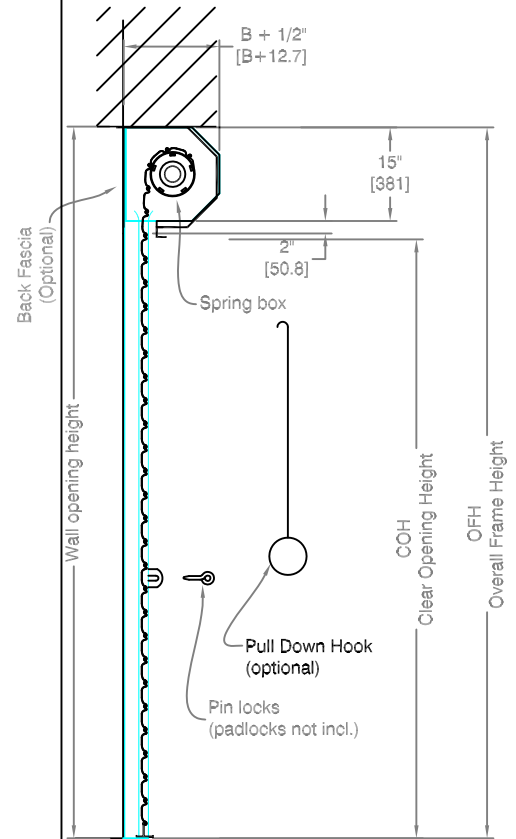

VERTICAL SECTION A - A

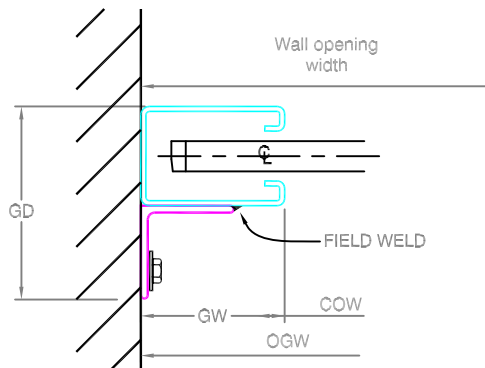

GUIDE SECTION B - B

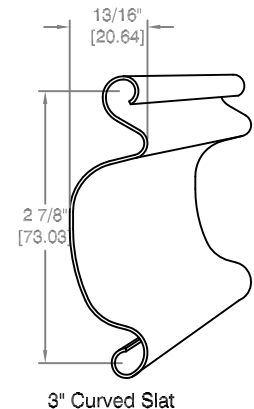

CURTAIN DETAILS

Notes:

- See page 2 for more options.
- All metric conversions of dimensions are shown in brackets [].

SALES REP:

CUSTOMER:

JOB NAME:

NUMBER:

Manufactured by:

Alpine[®]
OVERHEAD DOORS, INC.

8 HULSE ROAD EAST SETAUKET, N.Y. 11733

TEL: 631.473.9300 FAX: 631.642.0800

© COPYRIGHT APRIL 2005

BOX SPRING DOOR

3" Curved Slat

DAWN3DOOR®



ECONOMY BOX SPRING DOOR

Manual Push-up Operated

Between Jamb Mounted

Page#:

Page 2

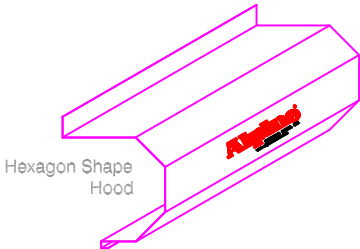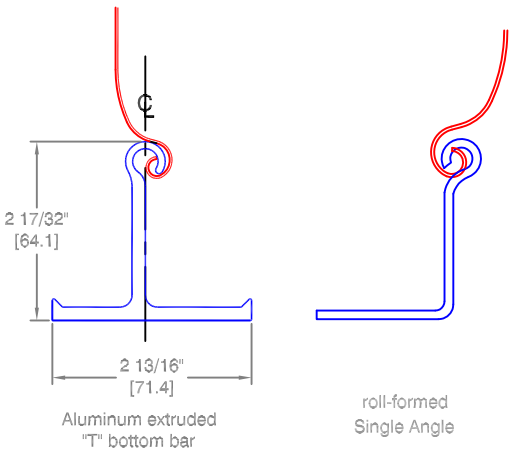


BOTTOM BAR OPTIONS AVAILABLE FOR THIS DOOR

HOOD SHAPE

OPTIONS:

Redi-Central™

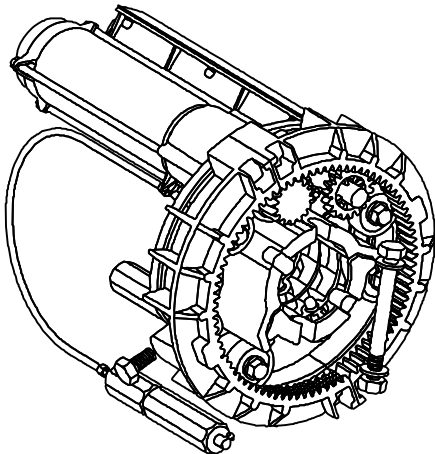

Model	Torque (in lbs)	Speed (rpm)	Lifting capacity	Power usage		Options
				(watts)	(Amps)	
MC 7 102	300	12	220	300	3.0	with brake
MC 7 202	300	12	220	300	3.0	manual release
MCM 7 302	300	12	220	300	3.0	without brake
MC 14 102	700	12	450	580	5.0	with brake
MC 14 202	700	12	450	580	5.0	manual release
MCM14 302	700	12	450	580	5.0	without brake

Distributed By:

Call your Alpine representative for additional options and safty products to help find the best Alpine door to suit your needs.

Manufactured by:

Alpine®
OVERHEAD DOORS, INC.
8 HULSE ROAD EAST SETAUKET, N.Y. 11733
TEL: (631)473-9300 FAX: (631)642-0800
© COPYRIGHT MAY 2007

NOTE: MAXIMUM PIPE DEFLECTION ON ANY SIZE DOOR IS .034




Page#:

Page 3

Finding the minimum required operation for the size door you need.

Operator Legend


- Manual Push Up Operation
- Motor Operation Only

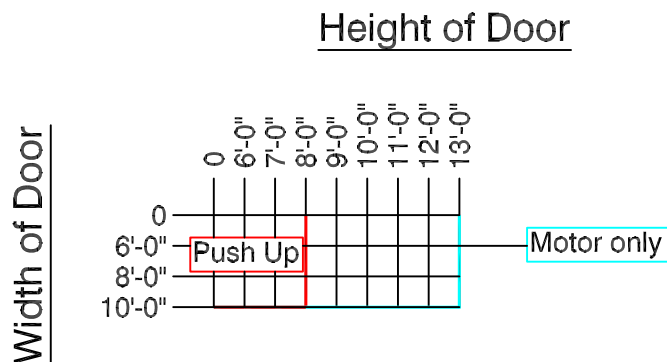

FOR LARGER SIZES CONSULT FACTORY.

To use Chart: Find where your door width and height meet to find the minimum operation that may be used for that door size.
For example: The blue line indicates a Hand Crank Operation. Any size door on that line or above that line may use a Hand Crank, including the door sizes that fall into the Manual push up door. But, The Manual push up door may not be used for any door size below the line representing Push up operation. For any door size larger than what is represented here please consult your Alpine Overhead Doors, Inc. Factory. This Graph is for reference only, subject to change without notice.

Finding the minimum required bracket size for the door you need.

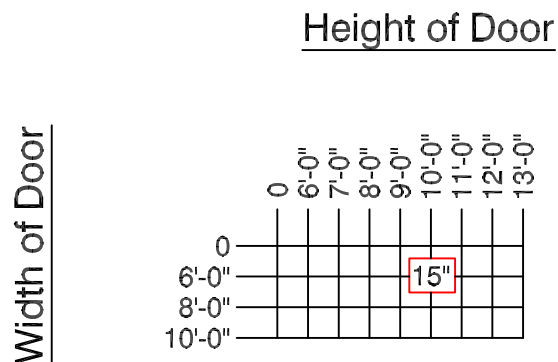

FOR LARGER SIZES CONSULT FACTORY.

NOTE: Bracket sizes may vary based on gauge of curtain. Bracket size is directly related to the pipe low moment arm deflection (not more than .03 inches per foot).

To use Chart: Find where your door width and height meet to find the minimum bracket size for your door. For any door size larger than what is represented here please consult your Alpine Overhead Doors, Inc. Factory. This Graph is for reference only, subject to change without notice.

Distributed By:

Manufactured by:

Alpine[®]
OVERHEAD DOORS, INC.
8 HULSE ROAD EAST SETAUKET, N.Y. 11733
TEL: (631)473-9300 FAX: (631)642-0800
© COPYRIGHT DEC 2006